

SMART PARTS

Washable, Reusable Cabin Air Filters

INSTALLATION INSTRUCTIONS PART NO. SP11731

The cabin air filter is located behind the glove compartment.
Installation time: 25 min

- With glove box closed, remove two screws at bottom (FIG 1)
 - in some vehicles, pivot pins are used instead of screws. Remove the pins
- Open glove box and remove 4 screws (FIG 2) along top of glove box, two of which secure latch
- Remove glove box assembly
- Where glove box used to be, locate a metal clip (FIG 3) that secures the filters to bottom of housing, and remove using a screwdriver. In some vehicles, a plastic panel is present covering the clip. If this is the case, remove the seven screws and 1 pin that secure the panel, and remove the panel. Now remove the clip.
- Remove two filters from housing by pulling out (FIG 4)
- Install new Smart Parts Washable Reusable Cabin Air Filters (squeeze to fit if needed)
- Reverse above steps to reassemble



FIG 1



FIG 2

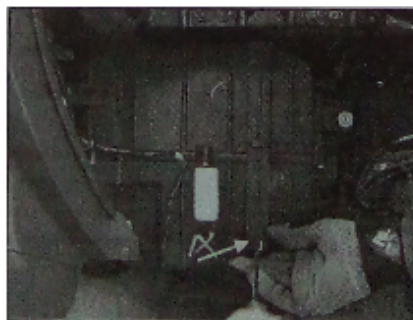


FIG 3

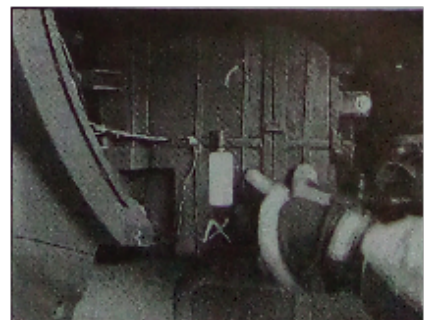


FIG 4

This is only a guide. See Owner's Manual and/or your mechanic for exact instructions for your particular model.